


# Mounting instructions/Montagevejledning

To ensure the products fire proofing abilities, it is important that the mounting instructions are followed.

For at sikre produktets brandtekniske egenskaber, er det vigtigt at montagevejledningen følges.

## A. Mounting/Montage

- 1 Compressed mineral wool – compressed 3 times as hard as normal.  
Sammenpresset mineraluld - sammenpresset 3 gange hårdere end normalt.
- 2 Backing rod.  
Fugebagstop.
- 3 5-20 mm mastic sealant.  
5-20 mm fuge.
- 4 Fixing zone – must be fixed per 450 mm.  
Fastgørelseszone – skal fastgøres per 450 mm.

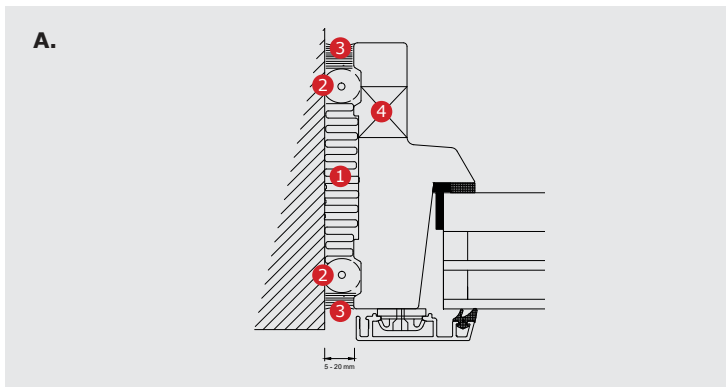

## B. Coupling to fire door/Sammenstilling til branddør

- 1 ATTENTION: Through-going silicone sealant must be applied to the fire element before coupling the two products.  
VIGTIGT: En gennemgående streng af siliconefugemasse placeres på brandelementets karm før sammenstilling.
- 2 Packer - must ensure gap of max 6 mm between the products.  
Afstandsstykke som sikrer maksimalt 6 mm mellemrum.
- 3 Backing rod.  
Fugebagstop.
- 4 Mastic joint – max 6 mm wide.  
Fuge – maksimalt 6 mm bred.

